

Note: This tutorial assumes that you have completed the previous tutorials: Arduino IDE Setup (/rosserial_arduino/Tutorials/Arduino%20IDE%20Setup).

 It is appreciated that problems/questions regarding this tutorial are asked on answers.ros.org (<http://answers.ros.org>). Don't forget to include in your question the link to this page, versions of your OS & ROS, and also add appropriate tags.

1. Hello World (example publisher)

Description: This tutorial shows step by step how to create a publisher using rosserial.

Tutorial Level: BEGINNER

Next Tutorial: Blink (example subscriber) (/rosserial_arduino/Tutorials/Blink)

electric fuerte groovy hydro indigo jade

Tabla de Contenidos

1. Hello World: Creating a Publisher
 1. The Code
 2. The Code Explained
 3. Uploading the Code
 4. Running the Code
2. Further Reading

2. Hello World: Creating a Publisher

2.1 The Code

We'll start our exploration into rosserial by creating a "hello world" program for our Arduino. (Note: the Arduino community often calls source code for programs a "sketch", we will use the same convention below). If you have followed the Arduino IDE Setup (/rosserial_arduino/Tutorials/Arduino%20IDE%20Setup) tutorial, you'll be able to open the sketch below by choosing `ros_lib -> HelloWorld` from the Arduino examples menu.

This should open the following code in your IDE:

[des]activar nros. de línea

```
1 /*
2  * rosserial Publisher Example
3  * Prints "hello world!"
4 */
5
6 #include <ros.h>
7 #include <std_msgs/String.h>
8
9 ros::NodeHandle nh;
10
11 std_msgs::String str_msg;
12 ros::Publisher chatter("chatter", &str_msg);
13
14 char hello[13] = "hello world!";
15
16 void setup()
17 {
18     nh.initNode();
19     nh.advertise(chatter);
20 }
21
22 void loop()
23 {
24     str_msg.data = hello;
25     chatter.publish( &str_msg );
26     nh.spinOnce();
27     delay(1000);
28 }
```

2.2 The Code Explained

Now, let's break the code down.

[des]activar nros. de línea

```
6 #include <ros.h>
7 #include <std_msgs/String.h>
8
```

As a part of every ROS Arduino program, you need to include the `ros.h` header file and header files for any messages that you will be using.

[des]activar nros. de línea

```
9 ros::NodeHandle nh;
```

Next, we need to instantiate the node handle, which allows our program to create publishers and subscribers. The node handle also takes care of serial port communications.

[des]activar nros. de línea

```
11 std_msgs::String str_msg;
12 ros::Publisher chatter("chatter", &str_msg);
```

We need to instantiate the publishers and subscribers that we will be using. Here we instantiate a Publisher with a topic name of "chatter". The second parameter to Publisher is a reference to the message instance to be used for publishing.

[des]activar nros. de línea

```
16 void setup()
17 {
18     nh.initNode();
19     nh.advertise(chatter);
20 }
```

In the Arduino setup function you then need to initialize your ROS node handle, advertise any topics being published, and subscribe to any topics you wish to listen to.

[des]activar nros. de línea

```
22 void loop()
23 {
24     str_msg.data = hello;
25     chatter.publish( &str_msg );
26     nh.spinOnce();
27     delay(1000);
28 }
```

Finally, in the loop function, the node publishes "Hello World" and calls `ros::spinOnce()` where all of the ROS communication callbacks are handled.

2.3 Uploading the Code

To upload the code to your Arduino, use the upload function within the Arduino IDE. This is no different from uploading any other sketch.

2.4 Running the Code

Now, launch the `roscore (/roscore)` in a new terminal window:

```
roscore
```

Next, run the rosserial client application that forwards your Arduino messages to the rest of ROS. Make sure to use the correct serial port:

```
rossrun rosserial_python serial_node.py _port:=/dev/ttyUSB0
```

Finally, watch the greetings come in from your Arduino by launching a new terminal window and entering :

```
rosservice echo chatter
```

3. Further Reading

Please see [rosserial/Overview](#) ([/rosserial/Overview/Publishers%20and%20Subscribers](#)) for more information on publishers and subscribers. Also see [limitations](#) ([/rosserial/Overview/Limitations](#)) for information about more complex data types.

Except where

otherwise Wiki: rosserial_arduino/Tutorials>Hello World (última edición 2014-09-22 16:29:23 efectuada por AustinHendrix (/AustinHendrix))
noted, the

ROS wiki is licensed under the

Creative Commons Attribution 3.0 (<http://creativecommons.org/licenses/by/3.0/>) | Find us on Google+ (<https://plus.google.com/113789706402978299308>)

Brought to you by:  Open Source Robotics Foundation

(<http://www.osrfoundation.org>)